


## 10655 Panel to Panel Coupling Installation Instructions

- 1) For top coupling, install 10655 coupling centered on panel to panel joint, you may need to tap it on with rubber mallet to push it over some welds. Once fully seated and centered the panels install the 8 stainless steel self-drilling screws with a drill and 5/16" hex head bit.

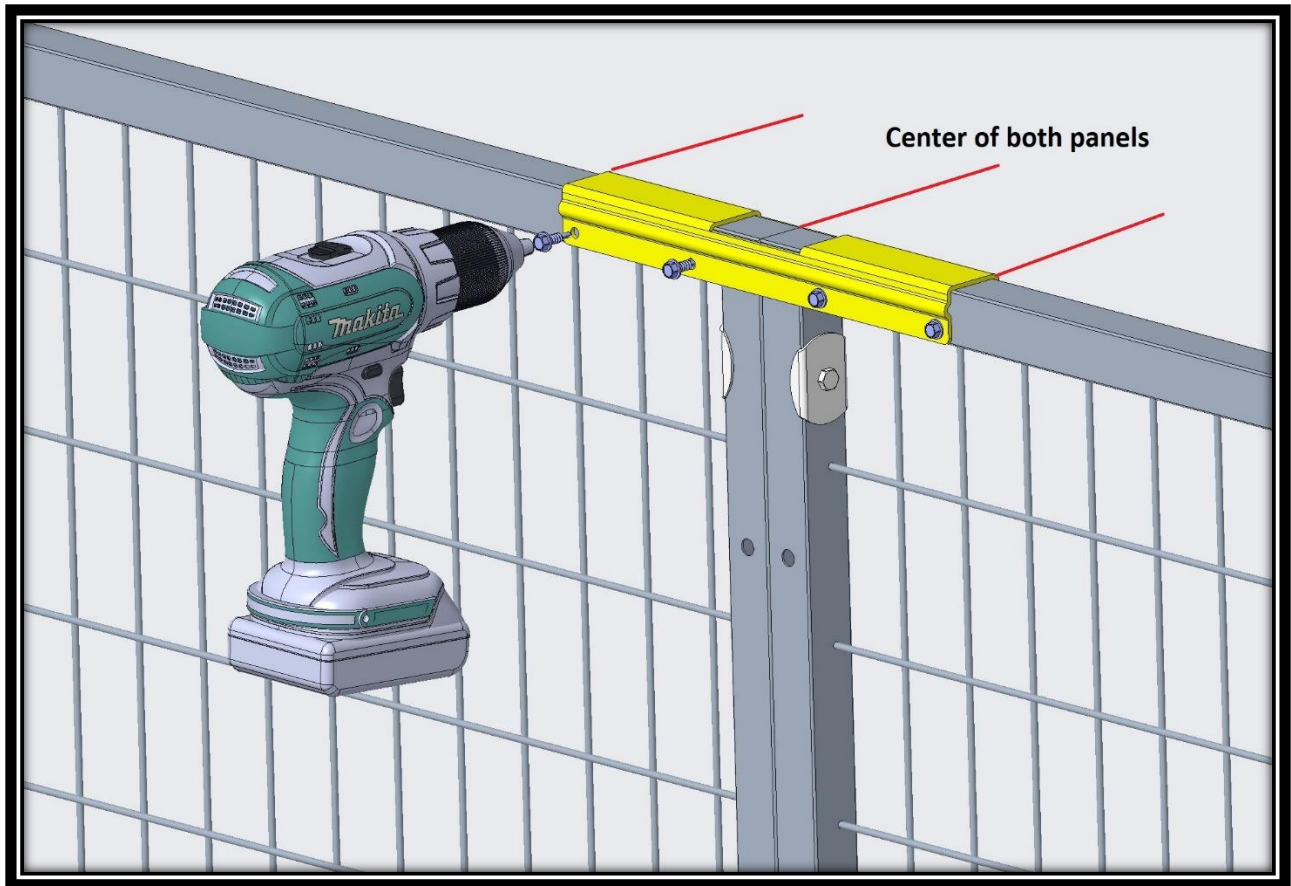

- 2) For bottom coupling, slide the 10655 coupling around both mating panel legs and center the couplings rectangular hole around the legs, you may need to tap it on with rubber mallet to push it over some welds. Once fully seated and centered the panels install the 8 stainless steel self-drilling screws with a drill and 5/16" hex head bit.

